


# Quick Start Guide

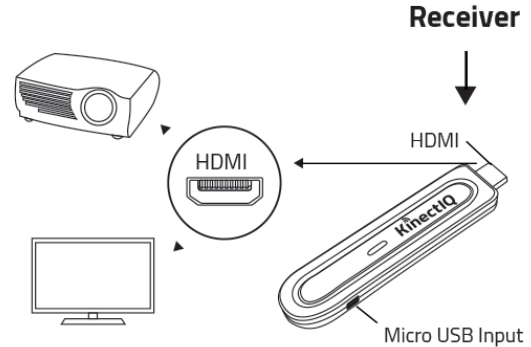


## Receiver

1. Connect micro USB plug of charging cable to micro USB input of KinectIQ AIR Receiver
2. Plug KinectIQ AIR Receiver into HDMI port of display or projector
3. Connect USB plug of charging cable to USB port of display or projector
4. Select HDMI source input to which KinectIQ AIR Receiver is connected



## Pairing

1. KinectIQ AIR Receiver : Press SET button for 5 seconds to enter Setting Mode
2. KinectIQ AIR Transmitter : Turn POWER SWITCH on and press TRANSMIT button for 10 seconds until STATUS LED starts blinking blue
- \*Repeat for each Transmitter you wish to pair
3. KinectIQ Receiver : Press SET Button for 5 seconds to exit Setting Mode

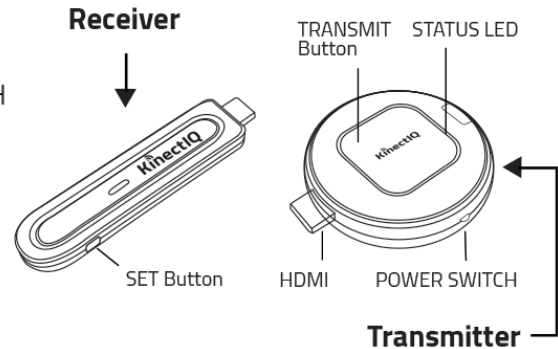

## Transmitter

1. Plug KinectIQ AIR Transmitter into HDMI port of device
2. Click TRANSMIT button to display on screen

